



# DRILL NIBBLER ATTACHMENT

MODEL NO: **SNA9821**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear eye protection



Wear ear protection



Wear a mask

## 1. SAFETY

- WARNING!** Isolate the drill from the electrical supply before connecting or disconnecting nibbler attachment.
- Ensure all safety instructions supplied with the drill to be used, are adhered too, in addition to these safety instructions.
- Maintain the nibbler attachment in good condition.
- Replace or repair damaged parts. *Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- Maintain correct balance and footing. Ensure that the floor is not slippery and wear non-slip shoes.
- Keep children and unauthorised persons away from the work area.
- Evaluate the work area before using the attachment.
- Secure loose work-pieces with a clamp, vice or other adequate holding device. **DO NOT** hold work-piece in your hand.
- Avoid unintentional starting of the drill.
- Wear approved safety eye protection (standard spectacles are not adequate).
- Remove ill fitting clothing. Remove ties, watches, rings, any loose jewellery and contain long hair.
- DO NOT** use the nibbler attachment where there are flammable liquids, solids or gases such as paint solvents, etc.
- DO NOT** allow children to operate the nibbler attachment.
- DO NOT** operate the nibbler attachment if any parts are missing as this may cause failure or possible personal injury.
- DO NOT** use the nibbler attachment for a task it is not designed to perform.
- DO NOT** operate the drill and nibbler attachment when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- DO NOT** exceed the capacities shown below, for the material to be cut.
- Familiarise yourself with the application and limitations of the nibbler attachment, as well as the specific hazards.
- When not in use, disconnect from the drill and store in a safe, dry childproof location.

## 2. INTRODUCTION





Turns an electric or air drill into a versatile nibbler suitable for cutting intricate shapes in various materials. Double end punch allows handle to be removed and re-attached to opposite side for longer periods of use.

## 3. SPECIFICATION

Model No.....SNA9821  
Consumable Parts:.....SNA9821P - Punch, SNA9821D - Die  
Maximum Capacity:.....Steel; 1.6mm, Stainless Steel; 1.2mm, Brass, Plastic, Copper; 2mm  
Maximum Speed:.....3000rpm

## 4. OPERATION

- 4.1. Attach the nibbler to a suitable drill by inserting the drive into the drill chuck and tightening the chuck.
- 4.2. Attach handle to the nibbler as shown (fig.1).
- 4.3. Secure the work-piece in a suitable clamp or vice, ensuring there is at least a 15mm clearance underneath the area of material to be cut.
- 4.4. Plug the drill into the supply, first ensuring it is turned off.
- 4.5. Securely hold the nibbler attachment handle and the drill, switch the drill on.
- 4.6. Carefully move the nibbler attachment towards the starting point of the desired cut and engage nibbler head with the material, start to cut into the material.
- 4.7. Carry on cutting through the material as desired, keeping the nibbler attachment at a right angle to the material. When finished cutting, move the nibbler head away from the material before switching off the drill.

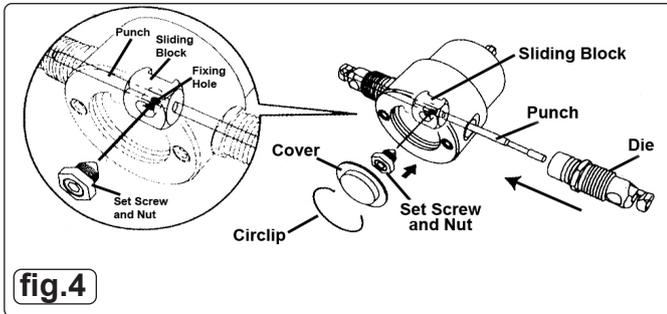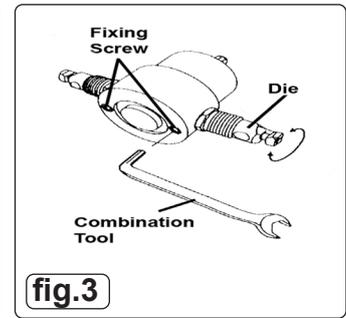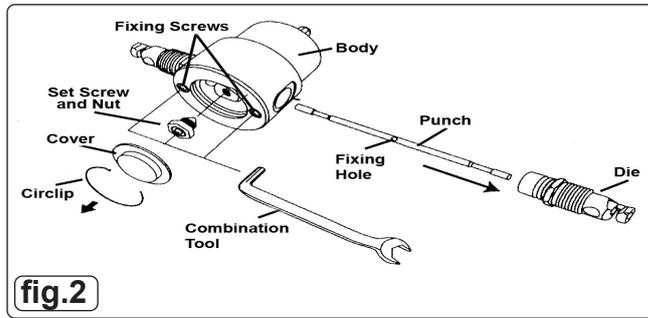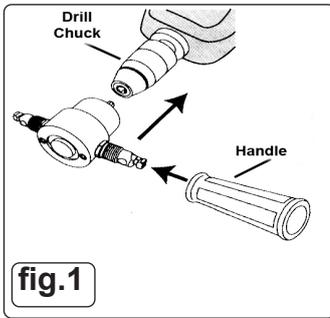

## 5. MAINTENANCE

- 5.1. The handle can be attached on either side of the nibbler attachment, so that either Die and Punch can be used, therefore doubling the life of the nibbler attachment.
- 5.2. To replace a Die, undo the appropriate Fixing Screw, use the combination tool to undo the Die from the main body of the nibbler attachment. Fit a new Die and tighten it to the body and tighten the Set-Screw (fig.3).
- 5.3. To replace the Punch, firstly remove the Die as above. Take off the Circlip and Cover and undo the Set Screw and Nut. Slide out the Punch. Fit a new Punch aligning the fixing hole in the Punch with the Sliding Block (fig.4). Re-fit the Set Screw and nut, Cover and Circlip. Re-fit the Die.
- 5.4. Regularly ensure all screws and parts are tightened.



### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

sales@sealey.co.uk

www.sealey.co.uk